

ready2mains™ Programmer ready2mains™

Product description

- Interface for programming of Tridonic products via ready2mains and U6Me2
- Support of configuration scripts
- Display and keypad for manual operation
- Removable protective cover
- USB interface for easy integration in automated test systems
- Parallel programming up to 5 LED drivers (max. 400 VA)
- Current setting in 1-mA-steps
- USB Mini-B cable 1 m included
- 5 years guarantee (conditions at www.tridonic.com)



Standards, page 3

Wiring diagrams and installation examples, page 3






ready2mains™ Programmer


ready2mains™

Technical data

AC voltage range	110 – 277 V
Mains frequency	50 / 60 Hz
Max. load	400 VA
Max. mains current	3 A
Terminals	0.25 – 1.5 mm ²
Cable length secondary	≤ 5 m
Ambient temperature ta	-25 ... +40 °C
Type of protection	IP20
Protective cover	blue, removable
Housing	grey, ABS UL94V-0

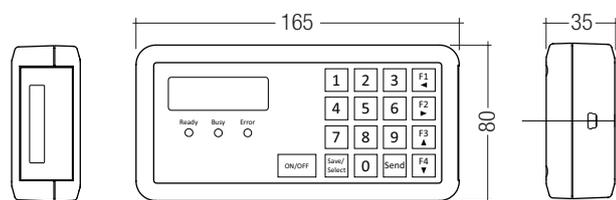

ready2mains Programmer without protective cover

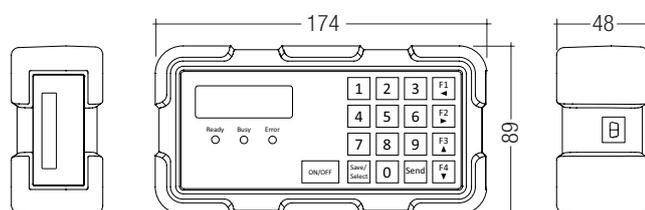

ready2mains Programmer with protective cover

Ordering data

Type	Article number	Packaging, carton	Weight per pc.
ready2mains Programmer	28001206	1 pc(s).	0.423 kg

1. Standards

EN 61347-2
EN 61347-2-11
EN 55015
EN 61000-3-2
EN 61000-3-3
EN 61547
EN 60950-1 (USB)

1.1 Glow wire test

according to EN 60598-1 with increased temperature of 650 °C passed.

2. Common

2.1 Overview ready2mains Programmer

The ready2mains Programmer is a versatile tool to program various Tridonic products via ready2mains and U6Me2. It is used in luminaire productions to cover a wide range of manufacturing processes, from manual programming to fully automated production lines. In addition, the Programmer can be used in outdoor applications to configure LED driver via U6Me2.

2.2 Note

For firmware upgrade see manual.

3. Installation



General:

- Connect max. 5 LED driver to the Programmer.
- Momentary-action switch has to be rated for mains voltage.
- At low mains voltages the max. mains current of 3 A has to be considered (max. 330 VA at 110 V).
- To guarantee a selective shut down in case of a hardware defect, we recommend to use an extra circuit breaker for the Programmer.
- To prevent destruction of the programmer at incorrect wiring of the luminaire (ground fault), it is recommended to use an isolating transformer plus an adequate fuse.
- Equipment for use in locations where children not likely to be present.

ready2mains:


- The ready2mains Programmer may only be used in conjunction with ready2mains compatible LED drivers.
- Any other LED driver or loads shall not be connected when programming via ready2mains.
- LED driver requires a load to be connected during programming.
- A load in the upper part of the load window is recommended (the highest possible load would be best).
- With small mains power at the LED driver there might be a systemic problem evaluating the optical feedback.

U6Me2:


- If load exceeds the stated maximum load, a contactor must be used in between the Programmer and the connected LED driver.

3.1 Wiring


3.1.1 ready2mains

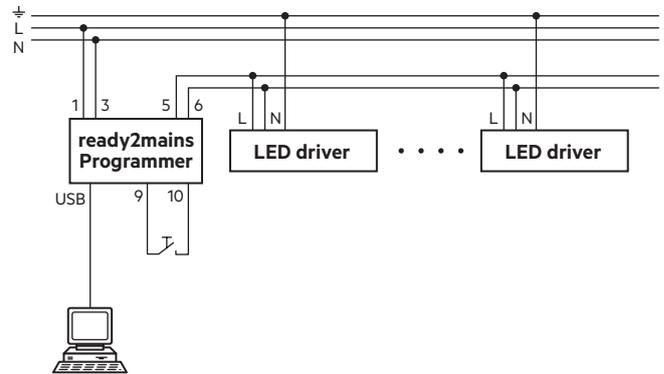


3.1.2 U6Me2 with contactor

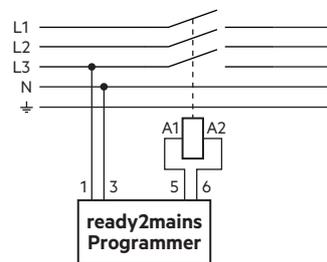

3.1.3 Production

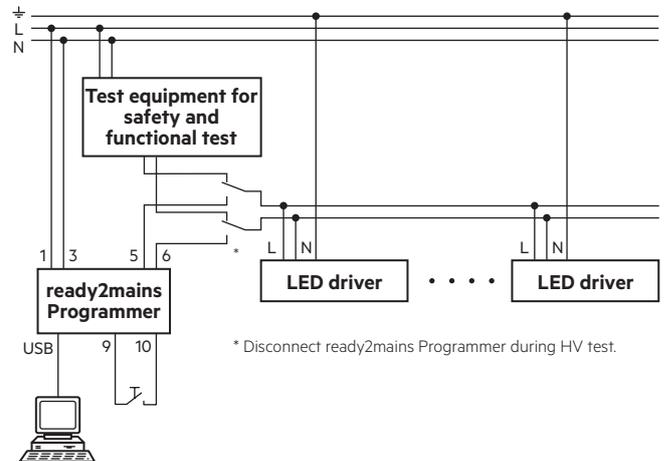

3.1.4 Security circuit against ground fault (incorrect wiring of the luminaire)

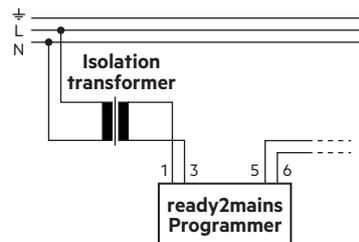

Tested transformer:

RS Pro 500VA Isolating Transformer


Reference number at RS components: 504-228

Insulation transformer should be protected against secondary short-circuit (B10 circuit breaker primary or a fuse secondary).


3.2 Installation instructions

For wiring use stranded wire with ferrules or solid wire from 0.25–1.5 mm². Strip 7 mm of insulation from the cables to ensure perfect operation of the screw terminals.

Use one wire for each terminal connector only.

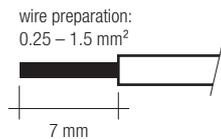

3.3 Connector pinning

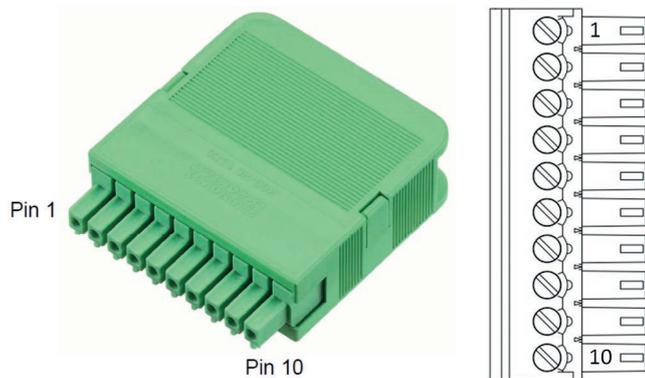

Pin no.	Input / output	Description
1	Input	Mains input L
2	–	n.c.
3	Input	Mains input N
4	–	n.c.
5	Output	Mains output L
6	Output	Mains output N
7	Output	n.c.
8	Output	n.c.
9	Input	Momentary-action switch ^①
10	Input	Momentary-action switch ^①

^① Momentary-action switch has to be rated for mains voltage. Switch impulse > 200 ms. Potential-free contact.

3.4 Connector notes

One connector with housing is included.

If additional connectors are needed, they maybe ordered from a specialized trader or the connector manufacturer itself.

Connector data:

Manufacturer: Phoenix Contact

Type: Printed-circuit board connector MC 1,5/10-ST-3,81

Article number: 1803659

Housing data:

Manufacturer: Phoenix Contact

Type: Cable housing KGG-MC 1,5/10

Article number: 1834424

4. Functions

4.1 Short-circuit behaviour

If there is a short-circuit between L and N at the output, the Programmer will switch off and restart after 10 s. If another short-circuit is detected, the Programmer will switch off and will be reactivated only after a mains reset. If a ground fault without isolating transformer happens the programmer can be destroyed.

4.2 Overload protection

If the maximum permissible connected load is exceeded, the Programmer will switch off the output and restart after 10 s. If the overload persists, the Programmer will switch off and will be reactivated only after a mains reset.

4.3 Overtemperature protection

If a temperature of 65 °C in the Programmer is exceeded, the data rate will be gradually linear reduced. Commands will therefore be implemented by the LED driver with a slight delay. If the temperature continues to rise and reaches a value of 120 °C, the Programmer will switch off and will be reactivated only after a mains reset.

5. Miscellaneous

5.1 Disposal of equipment



Return old devices in accordance with the WEEE directive to suitable recycling facilities.

5.2 Additional information

Additional technical information at www.tridonic.com → Technical Data

Guarantee conditions at www.tridonic.com → Services

Lifetime declarations are informative and represent no warranty claim. No warranty if device was opened.